

# SAFETY

# STATIONS

Your safety is our number one priority. Like all fireplace systems, it's important to run through regular safety checks. Please take the time to re-familiarise yourself with the following EcoSmart Fire safety procedures:

- ✓ Check your burner is in good working condition, the shut off mechanism is working smoothly, the filling point is accessible and effective, nothing foreign has fallen into it and make sure there is no visual or physical damage to the burner
- ✓ Inspect all around the installation – including lifting the burner out of its position – to ensure that no fuel has accumulated in or around the setting at any time
- ✓ Take out your operations manual and refresh your memory on the operational procedures for using this product – it's available on our website too
- ✓ Give your burner a good clean, see reverse for some quick and easy maintenance steps
- ✓ Check the operation of your no-spill jerry can, fire extinguisher, lighter and lighting rod to ensure you have the right tools to use for safely operating your fire
- ✓ Check your fuel supply is stored according to regulations...if you are unsure, contact your local distributor
- ✓ Check that all flammable items are within safe distance from the flame – that's a minimum of 1500mm at all times in all conditions
- ✓ And remember, never overfill your burner, never fill your burner whilst it is in operation or hot, never leave a fire unguarded and never leave children unsupervised

ecosmar<sup>+</sup>  
Fire

[www.ecosmartfire.com](http://www.ecosmartfire.com)

## WINTER FUEL TIPS

### USE THE CORRECT FUEL SOURCE

Use only denatured ethanol (also known as Methylated Spirits) in your EcoSmart Fire.

### DON'T OVERFILL YOUR BURNER

Never fill over the maximum level as indicated on the burner vent inside the EcoSmart Fire burner, and only fill to the level that you require for the burning time. If you do overfill and spill fuel, mop it up with a paper towel and then wipe down with a damp cloth – refer to the fuel MSDS for safety procedures.

### STOCK UP ON FUEL

Make life easier this winter and order your EcoSmart Fire fuel on a recurring cycle (e.g fortnightly deliveries). We offer a fuel supply service in some parts of Australia, to learn more or to order your fuel email [info@thefirecompany.com.au](mailto:info@thefirecompany.com.au)

## MAINTENANCE MAGIC

Follow these three quick and easy maintenance steps to ensure your EcoSmart Fire burns cleanly and efficiently this winter.

### 1/ REMOVE AND CLEAN THE BURNER

Remove the burner from the fireplace and wash it in hot soapy water to remove any traces of dust and old fuel (make sure you rinse the detergent thoroughly) – you can even put it in the dishwasher upside down on a hot cycle with detergent. By removing dust and residue that may have accumulated around the burner, you will ensure your fire burns more effectively.

### 2/ CLEAN THE SURROUNDS OF YOUR FIRE

When your fire is off and at room temperature, use a vacuum cleaner to remove any residue around the fire, and then use a soft, damp, disposable cloth to wipe away any dust and remaining dirt. You can use a mild abrasive product such as JIF® and then clean well with a wet cloth.

### 3/ ENHANCE THE SHINE

Remove any stainless steel discolouration, or simply restore the shine, by using a stainless steel cleaner and disposable cloth or a stainless steel wipe. Wipe the surface until you achieve an even shine.

Maintain the general surrounds of your EcoSmart Fire as you would a standard piece of furniture by dusting and polishing the surfaces on a regular basis.